

# General Settings

This view shows all the customization settings of the calculator. You can bring it up, at any moment, touching the corresponding “PREF” function on the calculator’s keyboard.

The image displays the 'General Settings' menu of a calculator, organized into three sections: CALCULATOR, FORMATS, and FEEDBACK. Each setting is accompanied by a descriptive callout box with an arrow pointing to the corresponding control.

Section	Setting	Current Value / Options	Description
CALCULATOR	Model	OLD / NEW	Select the calculator skin
	Calculation Logic	◀ CHN ▶	Toggle the operation mode between Chain, Algebraic or RPN
	Autolock Disable	OFF / ON	Prevent the device to go to sleep when the calculator is running
	Display Brightness	◀ 9 ▶	Adjust the display brightness relative to the device screen brightness
FORMATS	Numbers Format	◀ FIX ▶	Select the numbers display format between FIX, SCI, ENG or ALL
	Number of Decimals	◀ 2 ▶	Set the number of decimals to show
	Decimal Separator	, / .	Toggles thousands and decimal separator
	Dates Format	◀ M.DY ▶	Select the current date format between M.DY, D.MY or Y.MD
	Angle Unit	◀ DEG ▶	Set the current angle unit between DEG, RAD, GRAD, DMS or Slope%
FEEDBACK	Highlight 'Shift' keys	OFF / ON	Set to ON to highlight alternative keyboard functions when Shift key is active
	Haptic Feedback	OFF / ON	Set to ON to enable haptic feedback when a button is touched
	Click Sound	OFF / ON	Set to ON to enabled a click sound feedback when a button is touched
	Click Volume	◀ 10 ▶	Adjust the click sound feedback volume relative to the device volume setting
	Effects Sound	OFF / ON	Set to ON to enabled an effect sound when some actions occurred
	Effects Volume	◀ 5 ▶	Adjust the effects sound feedback volume relative to the device volume setting