

# General Settings

This view shows all the customization settings of the RLM-Flight computer. You can bring it up selecting in the main menu, the “General Settings” item from the “[UTIL▶]” menu button in the Navigation Bar.

The image shows a screenshot of the 'General Settings' menu for the RLM-Flight computer. The menu is divided into three sections: CALCULATOR, FORMATS, and FEEDBACK. Each setting is accompanied by a callout box explaining its function.

Section	Setting	Current Value	Callout Description
CALCULATOR	Default Units	U.S. / Metric	Set the default unit system
	Autolock Disable	OFF / ON	Prevent the device to go to sleep when the app is running
	Display Brightness	9	Adjust the display brightness relative to the device screen brightness
FORMATS	Numbers Format	FIX	Select the numbers display format between FIX, SCI, ENG or ALL
	Number of Decimals	2	Set the number of decimals to show
	Decimal Separator	, / .	Toggles thousands and decimal separator
FEEDBACK	Haptic Feedback	OFF / ON	Set to ON to enable haptic feedback when a button is touched
	Click Sound	OFF / ON	Set to ON to enabled a click sound feedback when a button is touched
	Click Volume	9	Adjust the click sound feedback volume relative to the device volume setting
	Effects Sound	OFF / ON	Set to ON to enabled an effect sound when some actions occurred
	Effects Volume	5	Adjust the effects sound feedback volume relative to the device volume setting